

## **SOUNDBOARD TROUBLESHOOTING**

- Make sure all settings match the images on the inside of the doors.
  - Double check mute/unmute
- If Pastor's wireless mic does not work - check the racks inside the cupboard on the righthand side.
  - If the bottom rack is not turned on - Pastor's wireless mic will not work.